



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Sound	 Sound / Title
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ
 EPG	 Guide / EPG / -/--
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 CHN List	 Smart / List
 0	 0
 Return / Back	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Home	 D.Menu / Top
 PR +	 CH+ / Page+
 Vol -	 Vol-
 PR -	 CH- / Page-





Original	Replacement	Original	Replacement
Rec	Rec / Rec Mode	PVR List	Display / Media
Sleep	Sleep / Timer	Quick	Setup / OPT /
Info	Info / Angle	AD	Eject / Surround
Play/Pause / Index	Play / Slow	3D	Shift + 3
Play/Pause / Index	Pause / Step / Freeze		
<< / Reveal	<< / Tune-		
>> / Mix	>> / Tune+		
Stop / Cancel	Stop / Hold		
I<< / Size	I<< / Preset-		
>>I / Sub-Page	>>I / Preset+		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
I/II / Nicam	Audio / Lang I/II		
Text	Text / Goto		
Freeze / Hold	Shift + Stop / Hold		

Original	Replacement	Original	Replacement
PVR List	Display / Media	PVR List	Display / Media
Quick	Setup / OPT /	Quick	Setup / OPT /
AD	Eject / Surround	AD	Eject / Surround
3D	Shift + 3	3D	Shift + 3

