
 
 
 
 
 
 

 
 
 




 
 
 
 
 

 
 
 
 


 

 

 
 
 
 

 

 

 

 

 

 







 

 











Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	DTV		Yellow / YouTube / Repeat
	TV		Blue / Prime Video / Random
	AV		Vol+
	1		Info / Angle
	2		CH+ / Page+
	3		Vol-
	4		Mute / Dimmer
	5		CH- / Page-
	6		Guide / EPG / -/--
	7		Setup / OPT /
	8		Up
	9		Left
	Text		OK
	0		Right
	PRE-CH		Down
	Red		Menu / Home





Original	Replacement
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 File List/[≡i]	 Smart / List
 Bookmark/[.,≡]	 Display / Media
 Repeat/[≡O]	 Shift + Green / APP / REPEAT
 A<>B/[≡?]	 Shift + Yellow / YouTube / REPEAT A-B
 PIC Size	 Zoom / Size
 PIC Mode	 Picture / Format
 SND Mode	 Sleep / Timer
 M/S	 D.Menu / Top

Original	Replacement

