 

 







 







 

 





 

 

 

 

 

 





 

 

 



 



 






 










| Original  | Replacement | Original  | Replacement                 |
|---|-------------|---|-----------------------------|
|      | Power       |      | Power                       |
|      | TV/Radio    |      | TV/Radio /                  |
|      | Red         |      | Red / Netflix / Search      |
|      | Green       |      | Green / APP / Repeat        |
|      | Yellow      |      | Yellow / YouTube / Repeat   |
|      | Blue        |      | Blue / Prime Video / Random |
|      | FAV         |      | Fav / Marker / PC           |
|      | Text        |      | Text / Goto                 |
|      | Hold        |      | Shift + Stop /              |
|      | Index       |      | Info / Angle                |
|     | Subtitle    |     | Subtitle / EQ               |
|    | Size        |    | Zoom / Size                 |
|    | Aspect      |    | Shift + Picture / Format    |
|    | Subpage     |    | Eject / Surround            |
|    | Media       |    | Shift + Display / Media     |
|    | Play        |    | Play / Slow                 |
|    | Pause       |    | Pause / Step / Freeze       |
|    | <<          |    | << / Tune-                  |
|    | >>          |    | >> / Tune+                  |
|    | Auto        |    | Smart / List                |
|    | Stop        |    | Stop / Hold                 |
|    | I<<         |    | I<< / Preset-               |
|    | >>I         |    | >>I / Preset+               |
|    | Menu        |    | Menu / Home                 |
|    | Up          |    | Up                          |
|    | Audio       |    | Audio / Lang I/II           |
|    | Left        |    | Left                        |
|   | OK          |   | OK                          |
|  | Right       |  | Right                       |
|  | Sleep       |  | Sleep / Timer               |
|  | Down        |  | Down                        |
|  | Exit        |  | Exit / Cancel / Clear       |
|  | Vol+        |  | Vol+                        |
|  | Mute        |  | Mute / Dimmer               |





| Original | Replacement        |
|----------|--------------------|
| CH+      | CH+ / Page+        |
| Vol-     | Vol-               |
| Display  | Display / Media    |
| CH-      | CH- / Page-        |
| 1        | 1                  |
| 2        | 2                  |
| 3        | 3                  |
| 4        | 4                  |
| 5        | 5                  |
| 6        | 6                  |
| 7        | 7                  |
| 8        | 8                  |
| 9        | 9                  |
| -/--     | Guide / EPG / -/-- |
| 0        | 0                  |
| Recall   | Back / Return      |
| Source   | AV / Input / RDS   |

| Original | Replacement      |
|----------|------------------|
| P.Mode   | Picture / Format |
| S.Mode   | Sound / Title    |

