 




Original	Replacement	Original	Replacement
 Power	 Power	 P+	 >>  / Preset+
 Mute	 Mute / Dimmer	 P-	 Shift + CH- /
 1	 1	 P-	 I<< / Preset-
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Up	 CH+ / Page+
 7	 7	 Down	 CH- / Page-
 8	 8	 OK	 OK
 9	 9	 Right	 Vol+
 0	 0	 Fav	 Fav / Marker / PC
 TV	 TV/Radio /	 Left	 Vol-
 Radio	 Shift + TV/Radio / Program	 Info	 Info / Angle
 Menu	 Menu / Home	 Lang / Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 Lang / Red	 Audio / Lang I/II
 P+	 Shift + CH+ / Page+	 Pause / Blue	 Blue / Prime Video / Random

Page+

Original	Replacement	Original	Replacement
 P+	 >>  / Preset+	 TV	 DIMMS MUTE
 P-	 Shift + CH- /	 DVD	 SAT
 P-	 I<< / Preset-	 AUX	 REC MODE
 Up	 Up	 SLOW	 STEP-FREEZE
 Down	 Down	 HOLD	 EQ
 Right	 Right	 TUNE-	 TUNE+
 Left	 Left	 PRESET-	 PRESET+
 Up	 CH+ / Page+	 TITLE	 LANG I/II
 Down	 CH- / Page-	 EQ	 SURROUND
 OK	 OK	 SOUND	 AUDIO
 Right	 Vol+	 FORMAT	 SIZE
 Fav	 Fav / Marker / PC	 TIMER	 PROGRAM
 Left	 Vol-	 PICTURE	 ZOOM
 Info	 Info / Angle	 TOP MENU	 OPT-TOOLS
 Lang / Red	 Red / Netflix / Search	 GOTO	 RDS
 Lang / Red	 Audio / Lang I/II	 D.MENU	 SETUP
 Pause / Blue	 Blue / Prime Video / Random	 TEXT	 AV INPUT



