



 

 













 







 

 



























 

 



 
 
 




 



Original	Replacement	Original	Replacement
 PWR	 Power	 Yellow/FAV	 Yellow / YouTube / Repeat
 Tv/Rad	 TV/Radio /	 Blue/A-Z	 Blue / Prime Video / Random
 Text	 Text / Goto	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/--
 2	 2	 Info	 Info / Angle
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 Exit	 Exit / Cancel / Clear
 Back	 Back / Return	 Page+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Page-	 CH- / Page-
 Red/Opt	 Red / Netflix / Search	 Pause	 Pause / Step / Freeze
 Green/AV+	 Green / APP / Repeat	 Play	 Play / Slow

Original	Replacement	Original	Replacement
 PWR	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK			
 EXIT			
 VOL+			
 VOL-		 TV	 DVD
 EXIT		 1	 2
 Page+		 3	
 Page-		 4	
 CH+		 5	
 CH-		 6	
 PAUSE		 7	
 PLAY		 8	
 STEP - FREEZE		 9	
 REPEAT		 0	
SLOW			
PLAY			
PLAY			





Original	Replacement
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Slow	 Shift + Play /
 List	 Smart / List
 A-B	 D.Menu / Top
 Mark	 Fav / Marker / PC
 Jump	 Subtitle / EQ
 PIP	 Zoom / Size
 Swap	 Setup / OPT /
 Move	 Display / Media
 Sleep	 Sleep / Timer

Original	Replacement

