














































 




 



| Original     | Replacement  | Original   | Replacement   |
|--------------|--|------------|---|
| On/Off       |  Power              | Menu       |  Menu / Home           |
| Mute         |  Mute / Dimmer      | Menu Up    |  Up                    |
| Txt Stop     |  Stop / Hold        | Info       |  Info / Angle          |
| Tone-        |  << / Tune-         | Menu Left  |  Left                  |
| Contrast-    |  I<< / Preset-      | OK Enter   |  OK                    |
| Contrast+    |  >>I / Preset+      | Menu Right |  Right                 |
| Color- S.Std |  Sound / Title      | Menu Off   |  Exit / Cancel / Clear |
| Menu audio   |  Audio / Lang I/II  | Menu Down  |  Down                  |
| Subt.List    |  Subtitle / EQ      | Back       |  Back / Return         |
| Update       |  Picture / Format   | Volume+    |  Vol+                  |
| Txt Expand   |  Zoom / Size       | Browse     |  Smart / List         |
| Sleep Timer  |  Sleep / Timer    | Chan.Up    |  CH+ / Page+         |
| Return TV    |  TV/Radio /       | Volume-    |  Vol-                |
| Menu video   |  D.Menu / Top     | Display    |  Display / Media     |
| Reveal       |  Setup / OPT /    | Chan.Down  |  CH- / Page-         |
| Text         |  Text / Goto      | 1          |  1                   |
| TV/AV        |  AV / Input / RDS | 2          |  2                   |



| Original      | Replacement   | Original       | Replacement   |
|---------------|---|----------------|---|
| 3             |  3                             | Level R/Woofer |  Shift + Right |
| 4             |  4                             | Audio+         |  Shift + Vol+  |
| 5             |  5                             | Audio-         |  Shift + Vol-  |
| 6             |  6                             |                |   |
| 7             |  7                             |                |   |
| 8             |  8                             |                |   |
| 9             |  9                             |                |   |
| Guide -/-- 1. |  Guide / EPG / -/--            |                |   |
| 0/10          |  0                             |                |   |
| 2.Fav P/C 2.  |  Fav / Marker / PC            |                |   |
| Red           |  Red / Netflix / Search      |                |   |
| Green         |  Green / APP / Repeat        |                |   |
| Yellow        |  Yellow / YouTube / Repeat   |                |   |
| Blue          |  Blue / Prime Video / Random |                |   |
| Nicam/Mono    |  Shift + Audio / Lang I/II   |                |   |
| AV 2          |  Shift + AV / Input / RDS    |                |   |
| Level L       |  Shift + Left                |                |   |

