 





Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Input		AV		Exit		Exit
	TV/TXT		Text		Vol+		Vol +
	Cancel		Media		Vol-		Vol -
	Reveal		D. Menu		Channel List		Smart
	Nicam/A2		Dual		EPG		Guide
	Size		Format		Info		Info
	Hold		Eject		Up		Up
	Index		TV/R		Down		Down
	Subpage		Options		Right		Right
	Red		Red		Left		Left
	Green		Green		OK		Ok
	Yellow		Yellow		1		1
	Blue		Blue		2		2
	CH+		Ch +		3		3
	CH-		Ch -		4		4
	Mute		Mute		5		5





Original	Replacement
6	6
7	7
8	8
9	9
0	0
FAV	PRE-CH
Recall	BACK
Picture	SHIFT + PICTURE FORMAT
Sound	SHIFT + SOUND DUAL
Sleep	PROG SLEEP
Subtitle	AD SUBT
Rec	REC MODE
Aspect	ECO 3D
<<	<<
>>	>>
I<<	<<
>>I	>>

Original	Replacement
Play	PLAY MODE
Pause	Pause
Stop	Stop
List	DISC NAV LIST
Repeat	SHIFT + REPEAT TEXT

