






 











 















Original	Replacement
	 Mute / Dimmer
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 Info / Angle
	 0
	 Smart / List
	 CH+ / Page+
	 Up

Original	Replacement
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Down
	 CH- / Page-
	 Exit / Cancel / Clear
	 Menu / Home
	 Rec / Rec Mode
	 Back / Return
	 Red / Netflix / Search
	 << / Tune-
	 Play / Slow
	 Green / APP / Repeat
	 >> / Tune+
	 Blue / Prime Video / Random





Original	Replacement
TEXT Blue / >> / Text	GOTO TEXT Text / Goto
RADIO Radio	SHIFT + TUNER 6 Shift + 6
RADIO Radio	SHIFT + PROGRAM TV/RADIO Shift + TV/Radio / Program
Yellow / Pause	STEP-FREEZE Pause / Step / Freeze
Yellow / Pause	YouTube REPEAT A-B Yellow / YouTube / Repeat
Stop	HOLD Stop / Hold
TV	SHIFT + TV 1 Shift + 1
TV	PROGRAM TV/RADIO TV/Radio /
F1	TITLE SOUND Sound / Title
F2	LANG I/II AUDIO Audio / Lang I/II

Original	Replacement

