








Original	Replacement
 Power	 Power
 Info	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 0
 0 / Zoom	 Eject
 Audio	 Dual
 Mute	 Mute
 Recall	 Back
 FAV	 Pre Ch

Original	Replacement
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 Blue / Pause	 Blue
 Blue / Pause	 Pause
 Red / Text	 Red
 Red / Text	 Text
 Multivideo	 Smart
 Yellow / Subtitle	 Yellow








 

 



 




 




















 









 

 

 


 



 
 

 
 



 



Original		Replacement	
 SUBTITLE	Yellow / Subtitle	 AD SUBT	Subt
 TV/AV	TV / AV	 TIMER AV	AV
 P/N	Green / P/N	 B	Green
 SAT	SAT	 APP MEDIA	Media
 TV/RADIO	TV / Radio	 SEARCH TV/R	TV/R
 EPG	EPG	 - / - GUIDE	Guide

Original		Replacement	

 

 



 

 










Original	Replacement	Original	Replacement
	Power		Power
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TV/SAT		AV
	TV/Radio		TV/R
	Zoom		Eject
	List		List
	Audio		Dual
	EPG		Guide
	Timer		Shift + AV
	Text		Text
	Exit		Exit
	Menu		Menu
	M/P		Media
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	P+		>>
	P-		<<
	Recall		Pre Ch
	FAV		Shift + Pre Ch
	1		1
	2		2
	3		3
	4		4





	Original	Replacement	Original	Replacement
	5			
	6			
	7			
	8			
	9			
	0			
	Info			
	Pause	