

 































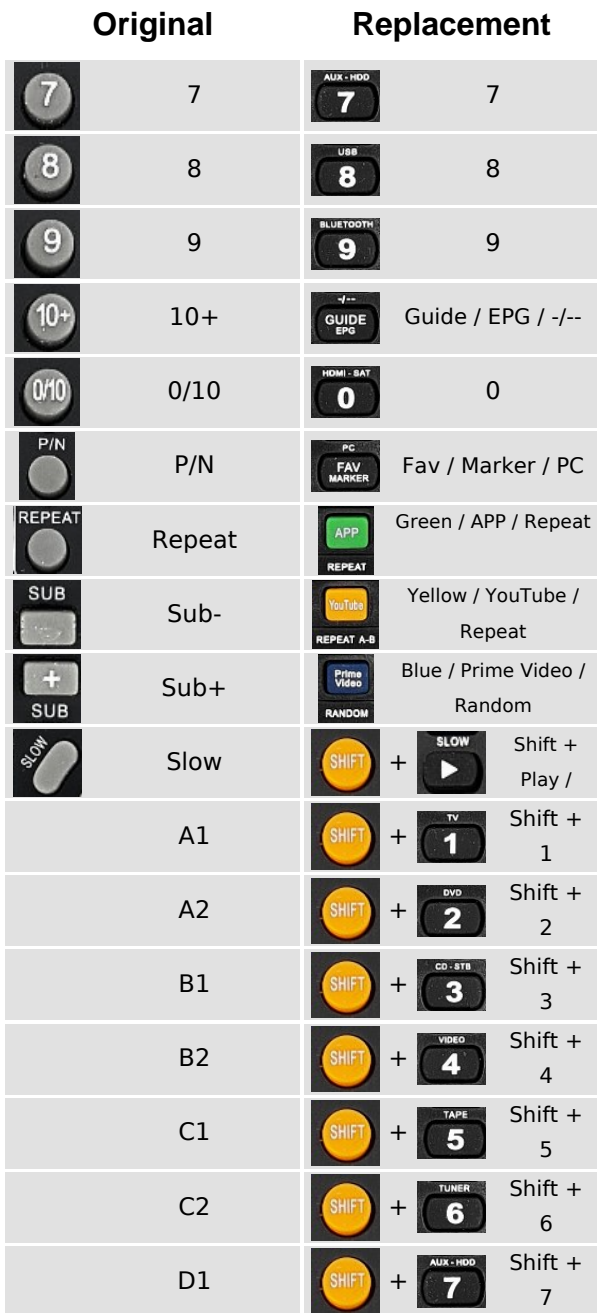




Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Subtitle / EQ
	 Zoom / Size
	 TV/Radio /
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up

Original	Replacement
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6





Power: **POWER**

Dimmer: **DIMMER**  
Mute: **MUTE**

Shift: **SHIFT**

TV: **TV** (SLOW)  
DVD: **DVD** (STEP-FREEZE)  
SAT: **SAT** (HOLD)  
AUX: **AUX** (REC MODE)

Play: **▶**  
Pause: **⏸**  
Stop: **■**  
Red: **●**

Tune-: **◀**  
Tune+: **▶**  
Pre-set: **⏮**  
Pre-set+: **⏭**

Title: **TEXT**  
Lang: **LANG**  
EQ: **EQ**  
Surround: **SURROUND**

Sound: **SOUND**  
Audio: **AUDIO**  
Subtitle: **SUBTITLE**  
Program: **PROGRAM**

Format: **FORMAT**  
Size: **SIZE**  
Timer: **TIMER**  
TV Radio: **TV RADIO**

Picture: **PICTURE**  
Zoom: **ZOOM**  
Sleep: **SLEEP**  
RDS: **RDS**

Top Menu: **TOP MENU**  
Opt-Tools: **OPT-TOOLS**  
Goto: **GOTO**  
AV Input: **AV INPUT**

Home: **HOME**  
Menu: **MENU**  
Angle: **ANGLE**  
Info: **INFO**

OK: **OK**

Clear: **CLEAR**  
Exit: **EXIT**  
Return: **RETURN**  
Back: **BACK**

Cancel: **CANCEL**  
List: **LIST**  
Smart: **SMART**  
Media: **MEDIA**  
Display: **DISPLAY**

Vol: **VOL** (+, -)  
Ch Page: **CH PAGE** (+, -)

TV: **TV**  
DVD: **DVD**  
CD-STB: **CD-STB**

1: **1**  
2: **2**  
3: **3**

Video: **VIDEO**  
Tape: **TAPE**  
Tuner: **TUNER**

4: **4**  
5: **5**  
6: **6**

AUX-HDD: **AUX-HDD**  
USB: **USB**  
Bluetooth: **BLUETOOTH**

7: **7**  
8: **8**  
9: **9**

Guide EPG: **GUIDE EPG**  
HDMI-SAT: **HDMI-SAT**  
PC: **PC**

0: **0**  
Fav Marker: **FAV MARKER**

Netflix: **NETFLIX**  
APP: **APP**  
YouTube: **YouTube**  
Prime Video: **Prime Video**

Search: **SEARCH**  
Repeat: **REPEAT**  
Repeat A-B: **REPEAT A-B**  
Random: **RANDOM**

Mandis shop  
www.mandis.tv