


























Original	Replacement	Original	Replacement
 Power	 Power	 10+	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 Step (TV-Mode)	 Shift + Pause / Step /
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Stop	 Stop / Hold
 OSD	 Display / Media	 Play	 Play / Slow
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 <<	 << / Tune-
 6	 6	 >>	 >> / Tune+
 L/R	 Text / Goto	 Slow	 Shift + Play /
 7	 7	 Up	 Up
 8	 8	 Menu	 Menu / Home
 9	 9	 Left	 Left
 P/N	 Fav / Marker / PC	 Enter	 OK
 Repeat	 Green / APP / Repeat	 Right	 Right
 0/10	 0	 Return	 Back / Return





Original	Replacement	Original	Replacement
	Down		Down
	Setup		Setup / OPT /
	Reset		Exit / Cancel / Clear
	Treb+		CH+ / Page+
	Sub+		Blue / Prime Video / Random
	Vol+		Vol+
	Input		AV / Input / RDS
	Treb-		CH- / Page-
	Sub-		Yellow / YouTube / Repeat
	Vol-		Vol-

Original	Replacement	Original	Replacement

