









 





 


 


 

 

 



 







 







 

 

 
 
 

 



 













Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	i/Info		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	World		Smart / List
	Music Photo		Display / Media
	Guide		Guide / EPG / -/--
	*/o		Setup / OPT /
	*/o..		Zoom / Size





Original		Replacement		Original	Replacement
	≡/Text		Text / Goto		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Lang		Audio / Lang I/II		
	[≡]..		Subtitle / EQ		
	[-O-]		Picture / Format		
	<<		<< / Tune-		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Play		Play / Slow		
	Stop		Stop / Hold		

