

 



 







 













 

 



 

 

 
 
 

















 

 

 

 





 








































 



| Original   | Replacement  |
|--|--|
|  Power          |  Power            |
|  123 / keypad   |  Eject / Surround |
|  Extra          |  D.Menu / Top     |
|  Up             |  Up               |
|  Left           |  Left             |
|  OK             |  OK               |
|  Right          |  Right            |
|  Down           |  Down             |
|  Return         |  Back / Return    |
|  Vol Up        |  Vol+            |
|  Home / Hub   |  Smart / List   |
|  CH Up        |  CH+ / Page+    |
|  Vol Down     |  Vol-           |
|  CH Down      |  CH- / Page-    |
|  Play / Pause |  Shift + Play / |
|  Mute         |  Mute / Dimmer  |
|  Play         |  Play / Slow    |

| Original  | Replacement   |
|---|---|
|  Pause         |  Pause / Step / Freeze |
|  Stop          |  Stop / Hold           |
|  Rec           |  Rec / Rec Mode        |
|  << / Tune-    |  << / Tune-            |
|  >> / Tune+    |  >> / Tune+            |
|  I<< / Preset- |  I<< / Preset-         |
|  >>I / Preset+ |  >>I / Preset+         |
|  S.Mode        |  Sound / Title         |
|  AD            |  Audio / Lang I/II     |
|  AD / Subt.   |  Subtitle / EQ        |
|  Picture     |  Picture / Format    |
|  P.Size      |  Zoom / Size         |
|  Sleep       |  Sleep / Timer       |
|  Auto Prog   |  TV/Radio /          |
|  Tools       |  Setup / OPT /       |
|  TTX/MIX     |  Text / Goto         |
|  Source      |  AV / Input / RDS    |





| Original | Replacement   | Replacement                       |
|----------|---|-----------------------------------|
| Menu     |    | Menu / Home                       |
| Info     |    | Info / Angle                      |
| Exit     |    | Exit / Cancel / Clear             |
| CH List  |    | Display / Media                   |
| 1        |    | 1                                 |
| 2        |    | 2                                 |
| 3        |    | 3                                 |
| 4        |    | 4                                 |
| 5        |    | 5                                 |
| 6        |    | 6                                 |
| 7        |   | 7                                 |
| 8        |    | 8                                 |
| 9        |    | 9                                 |
| Guide    |    | Guide / EPG / -/--                |
| 0        |    | 0                                 |
| Fav CH   |    | Fav / Marker / PC                 |
| Search   |  +  | Shift + Yellow / YouTube / Repeat |

| Original    | Replacement   | Replacement                 |
|-------------|---|-----------------------------|
| Prime Video |  +    | Shift + Blue / Prime        |
| Rakuten Tv  |  +    | Shift + Green / APP /       |
| Netflix     |  +    | Shift + Red / Netflix /     |
| Still       |  +    | Shift + Pause / Step /      |
| Dual I-II   |  +    | Shift + Audio / Lang I/II   |
| Add / Del   |  +    | Shift + Eject / Surround    |
| TV / DTV    |  +    | Shift + TV/Radio / Program  |
| E-Manual    |  +    | Shift + OK                  |
| Media P.    |  +    | Shift + Display / Media     |
| -/--        |  +    | Shift + Guide / EPG / -/--  |
| PRE-CH      |  +  | Shift + Fav / Marker / PC   |
| Red         |    | Red / Netflix / Search      |
| Yellow      |    | Yellow / YouTube / Repeat   |
| Blue        |    | Blue / Prime Video / Random |
| Green       |    | Green / APP / Repeat        |

