 

 


 





 

 



 

 





 

 


 
 
 

 
 









Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 CH List	 Smart / List
 P-	 CH- / Page-
 Media.P	 D.Menu / Top
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Replacement		Original		Replacement	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	P.Mode		Picture / Format				
	S.Mode		Sound / Title				
	Dual/I-II		Shift + Audio / Lang I/II				
	AD		Audio / Lang I/II				
	P.Size		Zoom / Size				
	Subt.		Subtitle / EQ				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

