 

 

 
 
 
 


 
 
 
 
 


 

 
 






Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Tv	 TV/R	 Return	 Back
 1	 1	 Info	 Info
 2	 2	 Exit	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Eject
 8	 8	 Red	 Red
 9	 9	 Green	 Green
 0	 0	 Yellow	 Yellow
 Enter	 Ok	 Blue	 Blue
 PRE-CH	 Pre Ch	 Vol+	 Vol +
 CH LIST	 List	 Vol-	 Vol -
 FAV CH	 Shift + Pre Ch	 Mute	 Mute
 Tools	 Options	 Source	 AV





Original		Replacement		Original	Replacement
	PR+		Ch +		
	PR-		Ch -		
	TTX/MIX		Text		
	Media.P		Media		
	P.Size		Format		
	Dual		Dual		
	Guide		Guide		
	Subt		Subt		
	<<		<<		
	Pause		Pause		
	>>		>>		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

