


 


 

 





Original		Replacement		Original		Replacement	
	Power		Power		>>I		>>I
	Source		AV		<<		<<
	Open/Close		Eject		>>		>>
	Sleep		Sleep		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Mute		Mute
	6		6		Repeat		Text
	7		7		Tuning+		Ch +
	8		8		Tuning-		Ch -
	9		9		Disc Menu		D. Menu
	0		0		Menu		Menu
	Dolby PL		Dual		Title Menu		TV/R
	DSP/EQ		Guide		Tools		Options
	I<<		I<<		Info		Info

 



 

 
 
 


 
 








 


 



 








 
 



 
 
 

 

 
 
 
 

 
 
 
 
 
 
 

 
 



 

 
 


Original		Replacement		Original	Replacement
	Return		Back		
	Exit		Exit		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	Enter		Ok		
	Red		Red		
	Green/Tuner		Green		
	Yellow/MO/ST		Yellow		
	Blue/CD Ripping		Blue		
	Dimmer		Subt		
	S.Vol		Format		
	P.Bass/Audio Upscale		3D		





Original	Replacement
 Power	 Power
 Function Tv	 AV
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<<	 <<<
 >>>	 >>>
 Stop	 Stop
 Play	 Play

Original	Replacement
 Pause	 Pause
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red



