

 







 



 

 

 

 

















Original	Replacement
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text / Goto
	 Back / Return
	 Mute / Dimmer
	 Shift + Smart / List
	 Vol+

Original	Replacement
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Menu / Home
	 Smart / List
	 Guide / EPG / -/-
	 Setup / OPT /
	 Info / Angle
	 Shift + Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK
	 Red / Netflix / Search
	 Green / APP / Repeat





Original		Replacement		Original		Replacement	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	E-Manual		TV/Radio /				
	3D		Zoom / Size				
	AD/Subt.		Subtitle / EQ				
	Stop		Stop / Hold				
	<</ <<		<< / Tune-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>/>>		>> / Tune+				

