






| Original  | Replacement | Original  | Replacement             |
|---|-------------|---|-------------------------|
|      | POWER       |      | Power                   |
|      | ←○          |      | Shift + Smart / List    |
|      | **/Ö        |      | Shift + Display / Media |
|      | *²/♀        |      | Shift + Red / Netflix / |
|      | SOURCE      |      | AV / Input / RDS        |
|      | PRESETS     |      | Smart / List            |
|      | ≡≡≡         |      | Setup / OPT /           |
|      | ♪/☺/▣       |      | Display / Media         |
|      | SLEEP       |      | Sleep / Timer           |
|      | 1 . /@      |      | 1                       |
|     | 2 abc       |     | 2                       |
|    | 3 def       |    | 3                       |
|    | 4 ghi       |    | 4                       |
|    | 5 jkl       |    | 5                       |
|    | 6 mno       |    | 6                       |
|    | 7 pqrs      |    | 7                       |
|    | 8 tuv       |    | 8                       |
|    | 9 wxyz      |    | 9                       |
|    | TV          |    | TV/Radio /              |
|    | 0           |    | 0                       |
|    | ↔           |    | Shift + Back / Return   |
|    | TV GUIDE    |    | Guide / EPG / -/-       |
|    | [≡]         |    | Text / Goto             |
|    | MENU        |    | Menu / Home             |
|    | Q.MENU      |    | D.Menu / Top            |
|    | UP          |    | Up                      |
|    | LEFT        |    | Left                    |
|   | OK          |   | OK                      |
|  | RIGHT       |  | Right                   |
|  | DOWN        |  | Down                    |
|  | BACK        |  | Back / Return           |
|  | →◻←         |  | Picture / Format        |
|  | EXIT        |  | Exit / Cancel / Clear   |
|  | *FAV        |  | Fav / Marker / PC       |





| Original   | Replacement   |
|--|---|
|  VOL+     |  Vol+                        |
|  MUTE     |  Mute / Dimmer               |
|  P+       |  CH+ / Page+                 |
|  VOL-     |  Vol-                        |
|  INFO     |  Info / Angle                |
|  P-       |  CH- / Page-                 |
|  REC      |  Rec / Rec Mode              |
|  PLAY     |  Play / Slow                 |
|  PAUSE    |  Pause / Step / Freeze       |
|  STOP    |  Stop / Hold                |
|  LANG.  |  Audio / Lang I/II         |
|  <<<    |  <<< / Tune-               |
|  >>>    |  >>> / Tune+               |
|  [≡]... |  Sound / Title             |
|  RED    |  Red / Netflix / Search    |
|  GREEN  |  Green / APP / Repeat      |
|  YELLOW |  Yellow / YouTube / Repeat |

| Original   | Replacement   |
|--|---|
|  BLUE |  Blue / Prime Video / Random |

