






 




Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute		-/--		Guide
	Up		Up		Exit		Exit
	Down		Down		P<P/Swap		Pre Ch
	Right		Right		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK/Select		Ok		P+		Ch +
	M		Menu		P-		Ch -
	1		1		PP		Eject
	2		2		I-II		Dual
	3		3		Tv/DTV		TV/R
	4		4		[≡]		Text
	5		5		[≡0]		Options
	6		6		AV/Source		AV
	7		7		[≡+]/[X]		Format
	8		8		[≡X]/[■ ■]		3D
	9		9		[.≡]/[■]		Subt





Original	Replacement	Original	Replacement
 [≡◆]	 MEDIA Media		
 [≡?]	 RETURN BACK Back		
 [≡i]	 DISPLAY INFO Info		
 Red/[+]/Wide/↑	 A Red		
 Green/↓	 B Green		
 Yellow	 C Yellow		
 GUIDE Blue/Guide	 D Blue		
 [i]	 E-MANUAL D.MENU D. Menu		

