


 


 







 
 


 


 
 



 



 
 

 



 



 



 


 
 










 



 




Original	Replacement	Original	Replacement
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back




 

 
 


 




 
 


 



 


 


 
 
 
 

 
 


 


 
 

 

 


 
 

 









 
 



 




Original	Replacement	Original	Replacement
 GOTO	Goto	 ECO 3D	3D
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	RPT		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue





Original	Replacement	Original	Replacement
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





Original	Replacement	Original	Replacement
 GOTO	 3D		
			
			
			
			
			
			
			
			
			
			
			
			

