













 









 




 


 









 









 







 











Original		Replacement		Original		Replacement	
	Source		AV / Input / RDS		Guide		Guide / EPG / -/--
	Power		Power		Up		Up
	Theatre		Sleep / Timer		[i+]		Info / Angle
	<<		<< / Tune-		Left		Left
	Play		Play / Slow		OK		OK
	>>		>> / Tune+		Right		Right
	Sync Menu		D.Menu / Top		Return		Back / Return
	I<<		I<< / Preset-		Down		Down
	Stop		Stop / Hold		Options		Setup / OPT /
	>>I		>>I / Preset+		Home		Menu / Home
	I-Manual		TV/Radio /		Red		Red / Netflix / Search
	Scene		Picture / Format		Green		Green / APP / Repeat
	[+]		Zoom / Size		Yellow		Yellow / YouTube / Repeat
	Digital/Analog		Smart / List		Blue		Blue / Prime Video / Random
	Exit		Exit / Cancel / Clear		1		1
	Internet/Video		Display / Media		2		2
	FAV		Fav / Marker / PC		3		3



