


 








 














Original	Replacement
 Source	 AV / Input / RDS
 [+]	 Picture / Format
 Power	 Power
 << / < / <	 I << / Preset-
 << / < / <	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 > > / >>	 >> / Preset+
 > > / >>	 >> / Tune+
 Sync Menu	 Menu / Home
 Stop	 Stop / Hold
 Theatre	 Display / Media
 Digital	 Shift + Red / Netflix / Search
 Analog	 Shift + Green / APP / Repeat
 Scene	 Shift + Yellow / YouTube / Repeat
 Audio	 Audio / Lang I / II
 Audio	 Shift + Blue / Prime Video / Random

Original	Replacement
 Guide	 Guide / EPG / - / - -
 [i +] / [?]	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Set up / OPT /
 Home	 Smart / List
 Home	 Shift + Menu /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2





Original		Replacement		Original		Replacement	
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Text		Text / Got o				
	0		0				
	♥		Fav / Marker / PC				
	Vol +		Vol +				
	Pr og+		CH+ / Page+				
	Vol -		Vol -				
	Pr og-		CH / Page-				
	Mute		Mute / Di mmer				
	[...]		Subtitle / EQ				

