

 
















| Original | Replacement |
|----------|---------------|
| | |
| Muting | Mute / Dimmer |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |







 









 











 

 







| Original | | Replacement | |
|---|--------------|---|-----------------------------|
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | >10 |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | Repeat |  | Green / APP / Repeat |
|  | Play Mode |  | Shift + Play / |
|  | Stereo/Mono |  | Shift + Audio / Lang I/II |
|  | Function |  | Shift + Setup / OPT / Tools |
|  | DVD Top Menu |  | Shift + Menu / |
|  | Sound Field+ |  | Shift + Vol+ |
|  | Night Mode |  | Shift + Smart / List |
|  | Sound Field- |  | Shift + Vol- |

| Original | | Replacement | |
|---|-------------|---|-----------|
|  | Enter1 |  | Shift + 1 |
|  | DVD Display |  | Shift + 2 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Replacement |
|---|---|
|  Power Tv |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/10 |  0 |
|  -/- |  Guide / EPG / -/- |
|  Enter |  OK |
|  Tv Vol+ |  Vol+ |
|  Tv CH+ |  CH+ / Page+ |
|  Tv Vol- |  Vol- |
|  Tv CH- |  CH- / Page- |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

