



Original	Replacement	
	Disc Skip	Blue / Prime Video / Random
	Sleep	Sleep / Timer
	Power	
	CD Play	Play / Slow
	Pause	Pause / Step / Freeze
	Stop	Stop / Hold
	Tuner/Band	Yellow / YouTube / Repeat
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	Deck A Play	Red / Netflix / Search
	<<	<< / Tune-
	>>	>> / Tune+
	Deck B Play	Green / APP / Repeat
	Check	Display / Media
	Clear	Exit / Cancel / Clear
	MD Play	Shift + Play /
	Pause MD	Shift + Pause / Step / Freeze

Original	Replacement	
	Stop MD	Shift + Stop /
	Loop	Smart / List
	Flash	Info / Angle
	Function	Menu / Home
	Up	Up
	Vol +	Vol+
	On / Off	OK
	Down	Down
	Vol -	Vol-

