 



 









 



 
 

 
 















Original	Replacement
 Open/Close	 Eject / Surround
 HDD	 Shift + 7
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input Select	 AV / Input / RDS
 Audio	 Audio / Lang I/II

Original	Replacement
 0	 0
 Subtitle	 Subtitle / EQ
 TV / DVD	 TV/Radio /
 Red / Top Menu	 Red / Netflix / Search
 Red / Top Menu	 D.Menu / Top
 Green / Menu	 Green / APP / Repeat
 Green / Menu	 Menu / Home
 Yellow / Chapter Mark	 Yellow / YouTube / Repeat
 Blue / Erase Mark	 Blue / Prime Video / Random
 System Menu	 Smart / List
 Title List	 Sound / Title
 TV Guide	 Guide / EPG / -/--
 Schedule	 Fav / Marker / PC
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK





Original	Replacement
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
I<< / Day -	I<< / Preset-
← Page	Shift + Left
Page →	Shift + Right
>>I / Day +	>>I / Preset+
<< / <II / <I	<< / Tune-
Play	Play / Slow
I> / II> / >>	>> / Tune+
Display	Display / Media
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
→ / Synchro Rec	Shift + OK

Original	Replacement
Rec Mode	Shift + Rec / Rec Mode
TV Vol +	Vol+
TV Prog +	Shift + CH+ /
TV Power	Shift + Power
TV Vol -	Vol-
TV Prog -	Shift + CH- /
TV Input	Shift + AV / Input / RDS

