










 
Original	Replacement
 Power	 Power
 Open/Close	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit / Cancel / Clear
 Enter	 Fav / Marker / PC
 Time/Text	 Setup / OPT /
 Picture Mode	 Sleep / Timer
 Audio	 Audio / Lang I/II

Original	Replacement
 Subtitle	 Subtitle / EQ
 Angle	 Red / Netflix / Search
 Sur	 Eject / Surround
 Search Mode	 AV / Input / RDS
 Repeat	 Shift + Setup / OPT / Tools
 A-B	 Shift + Play /
 Shuffle	 Yellow / YouTube / Repeat
 SA-CD	 Smart / List
 Album+	 CH+ / Page+
 Album-	 CH- / Page-
 Zoom	 Shift + Text /
 Picture Navi	 Zoom / Size
 >>	 >> / Preset+
 <<	 << / Tune-
 >> / >	 << / Preset-
 << / <	 >> / Tune+
 ← / <	 Shift + << /

Tune-





 





Original	Replacement
 II> / →	 +  Shift + >> / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Display	 Info / Angle
 Menu	 Menu / Home
 Top Menu	 +  Shift + Menu /
 Return	 Back / Return
 Stop	 Stop / Hold
 SA-CD/CD	 Display / Media

Original	Replacement





Original	Replacement	Original	Replacement
 Power	 Power		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Enter	 OK		
 Input	 AV / Input / RDS		
 Vol+	 Vol+		
 Vol-	 Vol-		

