









































 





























Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Recall / -/--	 Shift + Guide / EPG / -/--
 Power	 Power	 Rec / →←	 Rec / Rec Mode
 [ ]	 Display / Media	 [   ]	 Guide / EPG / -/--
 Memory Stick	 Smart / List	 Timer / Hold	 Stop / Hold
 Input	 AV / Input / RDS	 Text	 Text / Goto
 1	 1	 [X]	 Exit / Cancel / Clear
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Red / Audio	 Red / Netflix / Search
 8	 8	 Red / Audio	 Audio / Lang I/II
 9	 9	 Blue / Format	 Picture / Format
 [i+] [?]	 Info / Angle	 Blue / Format	 Blue / Prime Video / Random
 0	 0	 Green /	 Green / APP / Repeat
 Recall / -/--	 Back / Return	 Yellow	 Yellow / YouTube / Repeat











 



 































	Original	Replacement		Original	Replacement
	Vol+	 Vol+			
	Prog+	 CH+ / Page+			
	Vol-	 Vol-			
	Menu	 MENU / Home			
	Prog-	 CH- / Page-			





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall / -/--	 Guide / EPG / -/--
 Recall / -/--	 Back / Return
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 Play	 Play / Slow

Original	Replacement
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Prog+	 CH+ / Page+
 Prog-	 CH- / Page-

