



| | Original | Replacement | Original | Replacement |
|--|------------|------------------------|----------|-------------|
| | Photo | Smart / List | | |
| | Start Stop | Power | | |
| | T | CH+ / Page+ | | |
| | Search M. | Red / Netflix / Search | | |
| | I<< | I<< / Preset- | | |
| | >>I | >>I / Preset+ | | |
| | W | CH- / Page- | | |
| | << | << / Tune- | | |
| | Play | Play / Slow | | |
| | >> | >> / Tune+ | | |
| | Pause | Pause / Step / Freeze | | |
| | Stop | Stop / Hold | | |
| | Slow I> | Shift + Play / | | |
| | Slow I> | Right | | |
| | Zero Set | Green / APP / Repeat | | |
| | Display | Display / Media | | |

