



Original	Replacement	Original	Replacement
 Play	 Play / Slow		
 Start/Stop	 Power		
 Start/Stop	 Rec / Rec Mode		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Stop	 Stop / Hold		
 T	 CH+ / Page+		
 Pause	 Pause / Step / Freeze		
 I>/Slow	 Right		
 I>/Slow	 Shift + Play /		
 W	 CH- / Page-		
 Display	 Display / Media		

