 








 

 

 







Original	Replacement
 System Power	 Power
 Sleep	 Sleep / Timer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Shift	 D.Menu / Top
 Select 10	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 10	 Guide / EPG / -/-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol+
 Effect	 Menu / Home
 DBFB	 Smart / List
 Vol-	 Vol-
 CD	 Shift + 3
 Tape	 Shift + 5
 Tuner	 Shift + 6
 Phono	 Shift + 2
 Video 1	 Shift + 1
 Video 2	 Shift + 4











Original	Replacement
 System Power	 Power
 << Deck A	 << / Tune-
 << Deck B	 Shift + << /
 < Deck A	 Left
 < Deck B	 Shift + Left
 Deck A >	 Right
 Deck B >	 Shift + Right
 >> Deck A	 >> / Tune+
 >> Deck B	 Shift + >> /
 Stop Deck A	 Stop / Hold
 Stop Deck B	 Shift + Stop /
 Pause Deck A	 Pause / Step / Freeze
 Pause Deck B	 Shift + Pause / Step /
 Stop Rec Deck	 OK
 Stop Rec Deck	 Shift + OK
 Rec Deck A	 Rec / Rec Mode
 Rec Deck B	 Shift + Rec / Rec Mode

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 CD	 3
 Tape	 5
 Tuner	 6
 Phono	 2
 Video 1	 1
 Video 2	 4













 

 

 



 

 



 



 

 







 



Original	Replacement	Original	Replacement
 System Power	 Power		
 Shift	 D.Menu / Top		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 10	 Guide / EPG / -/--		
 Vol+	 Vol+		
 Vol-	 Vol-		
CD	 +  Shift + 3		
Tape	 +  Shift + 5		
Tuner	 +  Shift + 6		

Original	Replacement	Original	Replacement
Phono	 +  Shift + 2		
Video 1	 +  Shift + 1		
Video 2	 +  Shift + 4		





Original	Replacement
CD	 +  Shift + 3
 System Power	 Power
Tape	 +  Shift + 5
 Select 10	 Setup / OPT /
Tuner	 +  Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
Phono	 +  Shift + 2
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 Guide / EPG / -/--
Video 1	 +  Shift + 1

Original	Replacement
Video 2	 +  Shift + 4
 Vol+	 Vol+
 Vol-	 Vol-

