

 





 

 

 

 

 



 





 

 

 









Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 DVD Menu	 D.Menu / Top
 3	 3	 Down	 Down
 Open/Close/Tv	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 4	 4	 Vol+	 Vol+
 5	 5	 Sound	 Sound / Title
 6	 6	 CH+	 CH+ / Page+
 Recall/Goto	 Fav / Marker / PC	 Vol-	 Vol-
 7	 7	 PIC	 Picture / Format
 8	 8	 CH-	 CH- / Page-
 9	 9	 Sleep	 Sleep / Timer
 0	 0	 Aspect	 Shift + Picture / Format
 Tv Menu	 Menu / Home	 Rec/DVD Setup	 Rec / Rec Mode
 Source	 AV / Input / RDS	 Tv/Radio	 TV/Radio /
 UP	 Up	 Text	 Text / Goto











Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 DVD Menu	 D.Menu / Top
 3	 3	 Down	 Down
 Open/Close/Tv	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 4	 4	 Vol+	 Vol+
 5	 5	 Sound	 Sound / Title
 6	 6	 CH+	 CH+ / Page+
Recall/Goto	Fav / Marker / PC	Vol-	Vol-
7	7	PIC	Picture / Format
8	8	CH-	CH- / Page-
9	9	Sleep	Sleep / Timer
0	0	Aspect	Shift + Picture / Format
Tv Menu	Menu / Home	Rec/DVD Setup	Rec / Rec Mode
Source	AV / Input / RDS	Tv/Radio	TV/Radio /
UP	Up	Text	Text / Goto





Original	Replacement
 Play/Pause/EPG	 Play / Slow
 Stop/FAV	 Stop / Hold
 Info	 Info / Angle
 Red/DVD/USB	 Red / Netflix / Search
 Green/Title	 Green / APP / Repeat
 Yellow/PBC	 Yellow / YouTube / Repeat
 Blue/Angle	 Blue / Prime Video / Random
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play/Return	 Shift + Play /
 Pause/Display	 Shift + Pause / Step /
 Stop/DVD Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Reveal	 Display / Media
 Hold	 Shift + Stop /

Hold

Original	Replacement
 List	 Smart / List
 Index	 Guide / EPG / -/-
 Subpage	 Back / Return
 Size	 Zoom / Size
 Mix	 Setup / OPT /
 Freeze	 Pause / Step / Freeze

