




 

 

Original	Replacement
Power	Power
Tv/Radio	TV/Radio /
Eject	Eject / Surround
Media	Shift + Display / Media
Play	Play / Slow
Pause	Pause / Step / Freeze
Size	Zoom / Size
<<	<< / Tune-
Subpage	Smart / List
>>	>> / Tune+
D.Setup	Setup / OPT /
Rec	Rec / Rec Mode
Stop	Stop / Hold
FAV	Fav / Marker / PC
I<<	I<< / Preset-
>>I	>>I / Preset+
Index	Info / Angle

Original	Replacement
Lang/Audio	Audio / Lang I/II
Hold	Shift + Stop /
Text	Text / Goto
Subtitle	Subtitle / EQ
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Vol+	Vol+





Original	Replacement
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 Red/Goto	 Red / Netflix / Search
 Green/Angle	 Green / APP / Repeat
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Display	 Display / Media
 Title/Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Source	 AV / Input / RDS

Original	Replacement
 D.Menu	 D.Menu / Top
 EPG	 Guide / EPG / -/--

