



 
 

 


















 





 

Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 V-	 Vol-
 Guía	 Guide / EPG / -/-
 P-	 CH- / Page-
 MENÚ	 Menu / Home
 Up	 Up
 ENTRADA	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 INFO	 Info / Angle
 Down	 Down
 SALIR	 Exit / Cancel / Clear
 Subtítulo	 Subtitle / EQ
 AUDIO	 Audio / Lang I/II
 Back	 Back / Return
 Imagen	 Picture / Format
 Sonido	 Setup / OPT /





Original	Replacement
 Aspecto	 Zoom / Size
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <</[=i]	 << / Tune-
 Play	 Play / Slow
 Pause/[=♦]	 Pause / Step / Freeze
 >>/[=?]	 >> / Tune+
 I<</[=o]	 I<< / Preset-
 Stop/[=+]	 Stop / Hold
 >>I/[=x]	 >>I / Preset+
 Rec	 Rec / Rec Mode
 [/=]	 Text / Goto
 FAV	 Shift + Fav / Marker / PC
 Home	 Shift + Menu /
 Mouse	 Smart / List

Original	Replacement
 USB	 Shift + 8

