



 

 


 

 

 







 

 






 







 


 



 



 








 

 

 

 

 

 

 

 



 

 



Original	Replacement	Original	Replacement
 D.Menu	 D.Menu / Top	 7	 7
 Power	 Power	 8	 8
 Open / Close	 Eject / Surround	 9	 9
 Info	 Info / Angle	 Source	 AV / Input / RDS
 P.Mode	 Picture / Format	 0	 0
 S.Mode	 Sound / Title	 Q.View	 Shift + Menu /
 Sleep	 Sleep / Timer	 Mute	 Mute / Dimmer
 Audio I/II	 Audio / Lang I/II	 Guide	 Guide / EPG / -/-
 Subtitle	 Subtitle / EQ	 Vol +	 Vol+
 CH. List	 Smart / List	 P+	 CH+ / Page+
 Screen	 TV/Radio /	 Vol -	 Vol-
 1	 1	 P -	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 FAV	 Fav / Marker / PC
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK





Original	Replacement
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Record	 Rec / Rec Mode
 [X] / Repeat	 Back / Return
 ► / Index	 Play / Slow
 ■■ Pause	 Pause / Step / Freeze
 ■ Stop	 Stop / Hold
 Red / ◀◀ / REV	 Shift + Red / Netflix / Search
 Red / ◀◀ / REV	 Red / Netflix / Search
 Green / ▶▶ / FWD	 Shift + Green / APP / Repeat
 Green / ▶▶ / FWD	 Green / APP / Repeat
 Yellow / ◀◀◀ / Prev	 Shift + Yellow / YouTube / Repeat
 Yellow / ◀◀◀ / Prev	 Yellow / YouTube / Repeat
 Blue / ▶▶▶ / Next	 Blue / Prime Video / Random
 Blue / ▶▶▶ / Next	 Shift + Blue / Prime Video / Random
 [≡] / Setup	 Setup / OPT /

Original	Replacement
 [≡] / Setup	 Shift + Setup / OPT / Tools
 [≡] / Title	 Shift + Sound / Title
 [...] / Search	 Text / Goto
 [...] / Search	 Shift + Text /
 [□] / 10+	 Shift + 9
 [□] / 10+	 Shift + 0
 [?] / Program	 Shift + Guide / EPG / -/-
 [◆] / A-B	 Shift + Fav / Marker / PC
 ⊕ / Angle / Rec. List	 Shift + TV/Radio / Program
 ⊕ / Angle / Rec. List	 Shift + Sleep / Timer
 D.Call	 Shift + D.Menu / Top Menu

