












 








































 










| Original | Replacement   | Original | Replacement   |
|----------|---|----------|---|
|          |  Power               |          |  0                             |
|          |  AV / Input / RDS    |          |  Up                            |
|          |  Menu / Home         |          |  Down                          |
|          |  Audio / Lang I/II   |          |  Right                         |
|          |  Display / Media     |          |  Left                          |
|          |  Setup / OPT /       |          |  Subtitle / EQ                 |
|          |  TV/Radio /          |          |  Shift + Power                 |
|          |  1                   |          |  Stop / Hold                   |
|          |  2                   |          |  Pause / Step / Freeze         |
|          |  3                   |          |  Rec / Rec Mode                |
|          |  6                  |          |  << / Tune-                   |
|          |  5                 |          |  Play / Slow                 |
|          |  4                 |          |  >> / Tune+                  |
|          |  7                 |          |  Shift + Setup / OPT / Tools |
|          |  8                 |          |  Shift + Pause / Step /      |
|          |  9                 |          |   |
|          |  Fav / Marker / PC |          |   |



| Original    | Replacement   | Original     | Replacement   |
|-------------|---|--------------|---|
| On/Off      |  Power                 | 1            |  1                             |
| Update      |  Play / Slow           | 2            |  2                             |
| Reveal      |  Pause / Step / Freeze | 3            |  3                             |
| Txt Stop    |  Stop / Hold           | 4            |  4                             |
| Info        |  Rec / Rec Mode        | 5            |  5                             |
| Subt.List   |  Subtitle / EQ         | 6            |  6                             |
| Sleep Timer |  Picture / Format      | 7            |  7                             |
| Return TV   |  Zoom / Size           | 8            |  8                             |
| Menu video  |  D.Menu / Top          | 9            |  9                             |
| TV/AV       |  AV / Input / RDS      | 0/10         |  0                             |
| Menu        |  Menu / Home          | 2.Fav P/C 2. |  Fav / Marker / PC            |
| Menu Up     |  Up                  | Red          |  Red / Netflix / Search      |
| Display     |  Info / Angle        | Green        |  Green / APP / Repeat        |
| Menu Left   |  Left                | Yellow       |  Yellow / YouTube / Repeat   |
| Menu Right  |  Right               | Blue         |  Blue / Prime Video / Random |
| Menu Down   |  Down                |              |   |
| Menu audio  |  Display / Media     |              |   |

