 


 


 
















 
 
 
 












 

 
 








 

 






 


 



 




Original	Replacement	Original	Replacement
	Power		Power
	Netflix		Media
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Eco		3D
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Info		Info
	Option		Options
	Smart TV		Smart
	Guide		Guide
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Exit		Exit
	Zoom+		Shift + Ch +
	Zoom-		Shift + Ch -



