



 
 


 
 

 
 
 







 

 
 
 


 
 



 

 
 



 
 

 



 

 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 >10	 Pre Ch
 Disc Skip	 TV/R	 Recall	 Back
 Open/Close	 Eject	 << Search	 <<
 Disc	 List	 Search >>	 >>
 Random Mode	 Options	 Clear	 Exit
 Program Mode	 Sleep	 I<< Skip	 I<<
 1/Disc 1	 1	 Skip >>I	 >>I
 2/Disc 2	 2	 Stop	 Stop
 3/Disc 3	 3	 Pause	 Pause
 4/Disc 4	 4	 Play	 Play
 5/Disc 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 10	 Guide		

