









 




 

 




Original	Replacement
 Power MD	 Power
 TV	 TV/R
 CD	 Yellow
 DVD	 Blue
 Tuner/Band	 Green
 Tape	 Red
 VCR	 Smart
 MD	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Stop MD	 Stop
 Play MD	 Play
 <</<< MD	 <<
 >>/>> MD	 >>
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Enter	 Ok
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 1 MD	 1
 2 MD	 2
 3 MD	 3
 4 MD	 4
 5 MD	 5
 6 MD	 6
 7 MD	 7
 8 MD	 8
 9 MD	 9
 0 MD	 0
 >10/-/- MD	 Guide







Original	Replacement	Original	Replacement
Power DVD	Power	Right	Right
TV	TV/R	Left	Left
VCR	Smart	Enter	Ok
Tuner/Band	Green	Stereo	Dual
Tape	Red	Surround	Options
MD	Media	SFC	Subt
CD	Yellow	Test	Back
DVD	Blue	Delay	Format
Play DVD	Play	Level	3D
I<</<< DVD	<<	+	Ch +
Stop DVD	Stop	-	Ch -
>>/>>I DVD	>>	1 DVD	1
Top Menu/Disc/Deck	Menu	2 DVD	2
Display	Info	3 DVD	3
Menu	D. Menu	4 DVD	4
Up	Up	5 DVD	5
Down	Down	6 DVD	6











 
















 

 


 




Original	Replacement
 Power CD	 Power
 TV	 TV/R
 VCR	 Smart
 CD	 Yellow
 DVD	 Blue
 Tape	 Red
 MD	 Media
 Tuner/Band	 Green
 Stop CD	 Stop
 I<</<< CD	 <<
 >>/>>I CD	 >>
 Play CD	 Play
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Power Tape	 Shift + Power
 Stop Tape	 Shift + Stop
 Play Tape	 Shift + Play




 



 

 

 



 



 

 























 



 



 


 
 



 










Original	Replacement	Original	Replacement
 <</><< Tape	 +  Shift + <<		
 >>/>> Tape	 +  Shift + >>		
 Top Menu/Disc/Deck	 +  Shift + Menu		
 1 CD-Tape	 1		
 2 CD-Tape	 2		
 3 CD-Tape	 3		
 4 CD-Tape	 4		
 5 CD-Tape	 5		
 6 CD-Tape	 6		
 7 CD-Tape	 7		
 8 CD-Tape	 8		
 9 CD-Tape	 9		
 0 CD-Tape	 0		
 >10/-/- CD-Tape	 GUIDE		
 Direct Tuning/Disc Enter	 REPEAT TEXT		













Original	Replacement	Original	Replacement
 Power VCR	 Power	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu
 5 VCR	 5	 Display	 Info





Original	Replacement	Original	Replacement
 Menu	 D. Menu		
 Stereo	 Dual		
 Surround	 Options		
 SFC	 Subt		
 Test	 Back		
 Delay	 Format		
 Level	 3D		
 +	 Ch +		
 -	 Ch -		
 Power Tuner/Band	 Shift + Power		
 1 Tuner/Band	 Shift + 1		
 2 Tuner/Band	 Shift + 2		
 3 Tuner/Band	 Shift + 3		
 4 Tuner/Band	 Shift + 4		
 5 Tuner/Band	 Shift + 5		
 6 Tuner/Band	 Shift + 6		
 7 Tuner/Band	 Shift + 7		

Original	Replacement	Original	Replacement
 8 Tuner/Band	 Shift + 8		
 9 Tuner/Band	 Shift + 9		
 0 Tuner/Band	 Shift + 0		
 >10/-/-	 Shift + Guide		

