 











 
 





 




 

 

 






 




 

 

 
 

 

 



 

 
 




 
 




Original	Replacement	Original	Replacement
	Power MD		Power
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	MD		Media
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Stop MD		Stop
	Play MD		Play
	<</ << MD		<<
	>>/>> MD		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	1 MD		1
	2 MD		2
	3 MD		3
	4 MD		4
	5 MD		5
	6 MD		6
	7 MD		7
	8 MD		8
	9 MD		9
	0 MD		0
	>10/-/- MD		Guide



 







 

 




 
 
 







 
 


 


 

 








Original	Replacement
 Tv/AV	 AV
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
	 Ch +
	 Ch -
 Power TV	 Shift + Power
 Tv Vol Up	 Shift + Vol +
 Tv Vol Down	 Shift + Vol -
 1 Tv	 Shift + 1
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5

Original	Replacement
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 0 Tv	 Shift + 0
 >10/-/- Tv	 Shift + Guide



 

 
 




Original	Replacement	Original	Replacement
	Power DVD		Power
	TV		TV/R
	VCR		Smart
	Tuner/Band		Green
	Tape		Red
	MD		Media
	CD		Yellow
	DVD		Blue
	Play DVD		Play
	I<</<< DVD		<<
	Stop DVD		Stop
	>>/>>I DVD		>>
	Top Menu/Disc/Deck		Menu
	Display		Info
	Menu		D. Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6




 

 




 
 
 


	Original	Replacement		Original	Replacement
	7 DVD		7		
	8 DVD		8		
	9 DVD		9		
	0 DVD		0		
	>10/-- DVD		Guide		
	Vol+		Vol +		
	Vol-		Vol -		
	Muting		Mute		

	Original	Replacement





Original	Replacement	Original	Replacement
	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play

 



 






 







 








 








 
 






 



 



 



 





 








	Original	Replacement		Original	Replacement
	<</<< Tape	 + 	Shift + <<		
	>>/>> Tape	 + 	Shift + >>		
	Top Menu/Disc/Deck	 + 	Shift + Menu		
	1 CD-Tape		1		
	2 CD-Tape		2		
	3 CD-Tape		3		
	4 CD-Tape		4		
	5 CD-Tape		5		
	6 CD-Tape		6		
	7 CD-Tape		7		
	8 CD-Tape		8		
	9 CD-Tape		9		
	0 CD-Tape		0		
	>10/-/- CD-Tape		Guide		
	Direct Tuning/Disc Enter		Text		

 
 
 
 
 


 


 
 




 



 



Original	Replacement	Original	Replacement
 Power VCR	 Power	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</<<	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu
 5 VCR	 5	 Display	 Info





Original	Replacement
 Menu	 D. Menu
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7

Original	Replacement
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

