 

 
 


 
 


 

 
 



 













 

 




Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Clock / Timer	 AV
 Cancel	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10 / -/-$	 Guide
 Subtitle	 Subt
 Audio	 Dual

Original	Replacement
 Top Menu	 D. Menu
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Setup	 Options
 Display	 Info
 Angle	 Format
 Return	 Back
 DVD/CD	 Red
 TAPE	 Green
 EXT	 Yellow
 TUNER	 Blue
 Stop	 Stop
 Pause / Rev. Play	 Pause





Original	Replacement	Original	Replacement
 Play	 Play		
 Auto / Mono	 3D		
 I<< Skip	 I<<		
 Skip >>I	 >>I		
 << Slow/Search	 <<		
 Slow/Search >>	 >>		
 Muting	 Mute		
 Repeat	 Text		
 A-B Repeat	 Shift + Text		
 Play Mode	 Rec		
 Volume-	 Vol -		
 Volume+	 Vol +		
 Balance L	 Ch -		
 Balance L	 Shift + Left		
 Balance R	 Ch +		
 Balance R	 Shift + Right		

