 


Original	Replacement
Power AMP	Power
Power Audio	Shift + Power
1	1
2	2
3	3
Disc	Eject / Surround
4	4
5	5
6	6
>=10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
Up	Up
Menu	Menu / Home
Left	Left

Original	Replacement
Select	OK
Right	Right
Down	Down
Display	Display / Media
Band	Smart / List
CH-	CH- / Page-
CH+	CH+ / Page+
Tape 1	Shift + 5
Tape 2	Shift + 4
CD	Shift + 3
Tuner	Shift + 6
MD	Shift + 8
DVD	Shift + 2
Aux	Shift + 7
Phono	Shift + 1
Muting	Mute / Dimmer
Volume-	Vol-

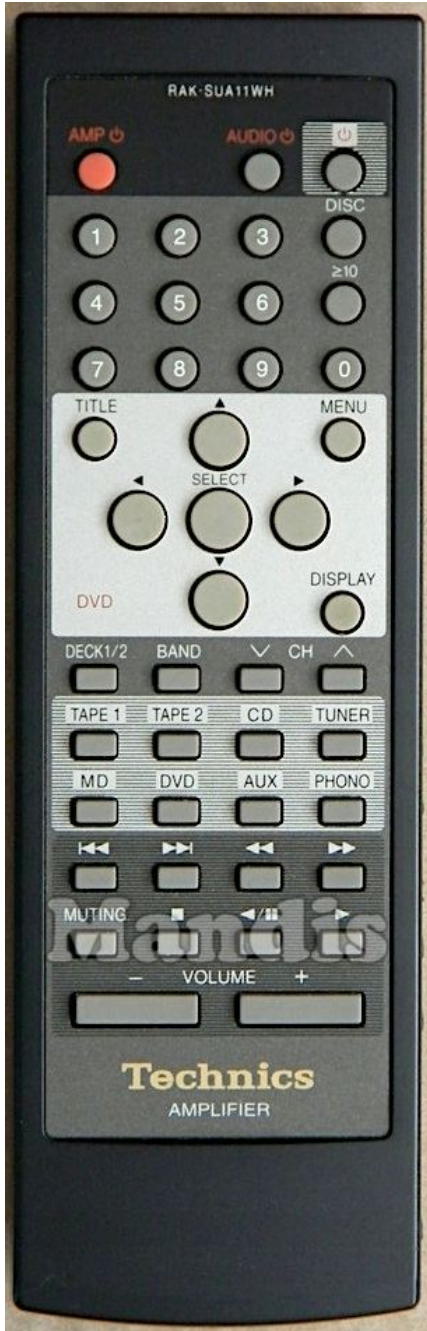 




Original	Replacement
Power DVD	Power
1	1
2	2
3	3
Disc	Eject / Surround
4	4
5	5
6	6
>10	Guide / EPG / -/-
7	7
8	8
9	9
0	0
Up	Up
Menu	Menu / Home
Left	Left
Select	OK

Original	Replacement
Right	Right
Down	Down
Display	Display / Media
Band	Smart / List
CH-	CH- / Page-
CH+	CH+ / Page+
Tape	Shift + 5
CD	Shift + 3
DVD	Shift + 2
I<</<<	I<< / Preset-
>>/>>I	>>I / Preset+
Muting	Mute / Dimmer
Stop	Stop / Hold
Play	Play / Slow
Volume-	Vol-
Volume+	Vol+



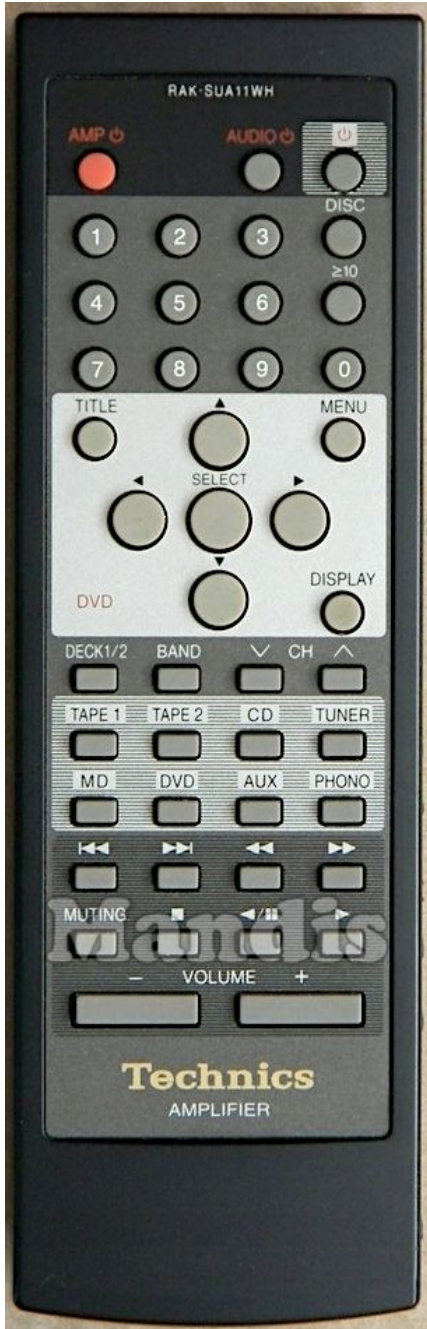

Original	Replacement
 Power CD	 Power
 1	 1
 2	 2
 3	 3
 Disc	 Eject / Surround
 4	 4
 5	 5
 6	 6
 >=10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 CD	 Shift + 3
 TUNER	 Shift + 6
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 <<	 << / Tune-
 >>	 >> / Tune+
 Muting	 Mute / Dimmer
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Volume-	 Vol-
 Volume+	 Vol+

