



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 0
 0 / AV	 AV / Input / RDS
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Original	Replacement
 Green / Stop	 Stop / Hold
 Green / Stop	 Green / APP / Repeat
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / Aspect /	 Picture / Format
 Blue / Aspect /	 Blue / Prime Video / Random
 Blue / Aspect /	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original	Replacement	Original	Replacement
TV / Radio	TV/Radio /		
Vol -	Vol-		
Prog -	CH- / Page-		
Menu	Menu / Home		
Vol +	Vol+		
TXT / Mix	Text / Goto		
Still	Pause / Step / Freeze		
PIP	D.Menu / Top		
Sound	Sound / Title		
SAT1	Shift + 2		
SAT2	Shift + 3		
TV	Shift + 1		
Sleep	Sleep / Timer		

Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 AV / Input / RDS
 0 / AV	 0
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / >> /	 >> / Tune+
 Blue / >> /	 Picture / Format
 Blue / >> /	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original	Replacement	Original	Replacement
 TV / Radio	 TV/Radio /		
 Vol -	 Vol-		
 Prog -	 CH- / Page-		
 Menu	 Menu / Home		
 Vol +	 Vol+		
 TXT / Mix	 Text / Goto		
 Still	 Pause / Step / Freeze		
 PIP	 D.Menu / Top		
 Sound	 Sound / Title		
 SAT1	 Shift + 2		
 SAT2	 Shift + 3		
 TV	 Shift + 1		
 Sleep	 Sleep / Timer		

Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 AV / Input / RDS
 0 / AV	 0
 OPT	 Setup / OPT /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / >> /	 Blue / Prime Video / Random
 Blue / >> /	 Picture / Format
 Blue / >> /	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original	Replacement	Original	Replacement
 TV / Radio	 TV/Radio /		
 Vol -	 Vol-		
 Prog -	 CH- / Page-		
 Menu	 Menu / Home		
 Vol +	 Vol+		
 TXT / Mix	 Text / Goto		
 Still	 Pause / Step / Freeze		
 PIP	 D.Menu / Top		
 Sound	 Sound / Title		
 SAT1	 Shift + 2		
 SAT2	 Shift + 3		
 TV	 Shift + 1		
 Sleep	 Sleep / Timer		

Original	Replacement

