





 

 


 
 


 









 

 
 

 



 
 


Original	Replacement
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Red
 Recorder	 Green
 Network	 Yellow
 Phono	 Blue
 AUX	 Smart
 Tuner	 Media
 Internet Radio Preset 1	 Shift + 1
 Internet Radio Preset 2	 Shift + 2
 Internet Radio Preset 3	 Shift + 3
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<

Original	Replacement
 >>	 >>
 Preset+	 Ch +
 Preset-	 Ch -
 Pure Direct/Favorite	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Mode	 Format
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1

 

 



 
 
 







 
 
 






 





 














Original	Replacement	Original	Replacement
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 +10	 GUIDE		
 CLEAR	 EXIT		
 RANDOM	 OPT		
 REPEAT	 TEXT		
 PROGRAM SEARCH	 SLEEP		
 DIMMER	 DUAL		


 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		Pure Direct/Favorite		Pre Ch
	Power AMP		Shift + Power		Vol+		Vol +
	CD		Red		Vol-		Vol -
	Recorder		Green		Mute		Mute
	Network		Yellow		Info		Info
	Phono		Blue		Mode		Format
	AUX		Smart		Source		AV
	Tuner		Media		Menu		Menu
	Play		Play		Up		Up
	Pause		Pause		Down		Down
	I<<		I<<		Right		Right
	>>I		>>I		Left		Left
	Stop		Stop		Enter		Ok
	<<		<<		1		1
	>>		>>		2		2
	Preset+		Ch +		3		3
	Preset-		Ch -		4		4





	Original	Replacement		Original	Replacement
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	+10		Guide		
	Clear		Exit		
	Random		Options		
	Repeat		Text		
	Search/Program		Sleep		
	Dimmer		Dual		

