



 



 






























 


 



 

 



















 




Original	Replacement	Original	Replacement
 Standby	 Power	 Back	 Back / Return
 Mute	 Mute / Dimmer	 OK	 OK
 AV	 AV / Input / RDS	 Up	 Up
 Tv/Radio	 TV/Radio /	 Down	 Down
 1	 1	 Right	 Right
 2	 2	 Left	 Left
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Vol+	 Vol+
 6	 6	 Vol-	 Vol-
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat
 9	 9	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home	 Audio	 Audio / Lang I/II
 TXT	 Text / Goto	 White/Info	 Info / Angle
 Exit	 Exit / Cancel / Clear	 List	 Smart / List





Original	Replacement
	 Guide / EPG / -/--
	 +  Shift + Green / APP /
	 Subtitle / EQ

Original	Replacement

