



Original	Replacement	Original	Replacement
 Power	 Power	 Up / CH+	 Ch +
 Mute	 Mute	 Down / CH-	 Down
 1	 1	 Down / CH-	 Ch -
 2	 2	 Right / Vol+	 Right
 3	 3	 Right / Vol+	 Vol +
 4	 4	 Left / Vol-	 Left
 5	 5	 Left / Vol-	 Vol -
 6	 6	 OK	 Ok
 7	 7	 SUB-T	 Subt
 8	 8	 Info	 Info
 9	 9	 Text	 Text
 0	 0	 Audio	 Dual
 Menu	 Menu	 EPG	 Guide
 Last	 Back	 Favor	 Pre Ch
 TV / R	 TV/R	 Red / I<<	 Red
 Exit	 Exit	 Red / I<<	 I<<
 Up / CH+	 Up	 Green / <<	 Green





Original	Replacement	Original	Replacement
 Green / <<	 <<		
 Yellow / >>	 Yellow		
 Yellow / >>	 >>		
 Blue / >>	 Blue		
 Blue / >>	 >>		
 USB	 Media		
 Mode	 Smart		
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		

