
 


 


 





 



 

 


 















Original	Replacement
	 Power
	 Smart
	 Eject
	 Format
	 3D
	 Options
	 List
	 Dual
	 Subt
	 Shift + Ok
	 Red
	 Green
	 Yellow
	 Info
	 Blue
	 Guide
	 Up

Original	Replacement
	 Left
	 Ok
	 Right
	 Down
	 Exit
	 Menu
	 Media
	 Vol +
	 Vol -
	 Mute
	 Back
	 Ch +
	 >>I
	 Ch -
	 I<<<
	 1
	 2





	Original	Replacement	Original	Replacement
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	AV			
	TV / Video			
	<< REV			
	>> FWD			
	Play			
	Rec			
	Stop			
	Pause			

