







 





















Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 <<	 << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search


Original	Replacement
 Sound	 Sound / Title
 Green	 Green / APP / Repeat
 List	 Shift + Smart / List
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Mosaic	 Smart / List
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



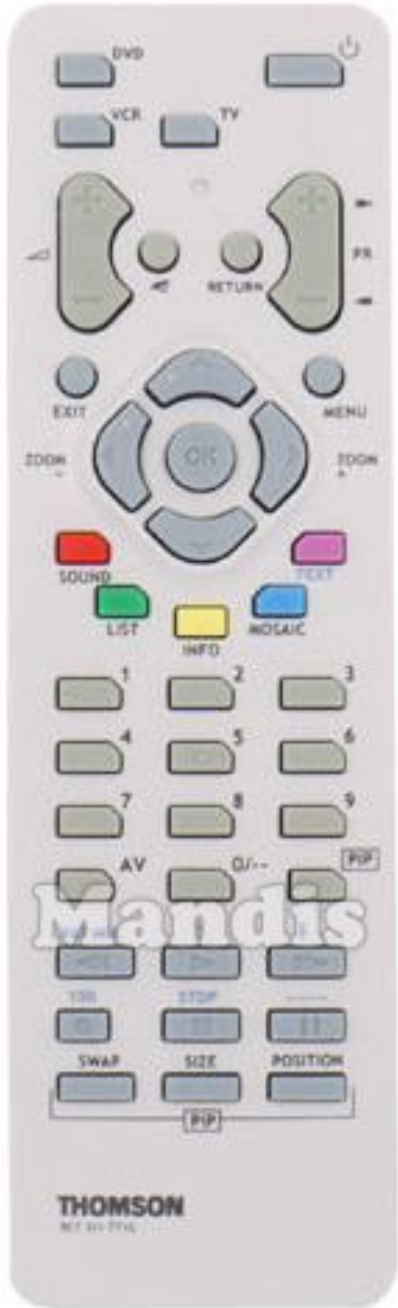


 




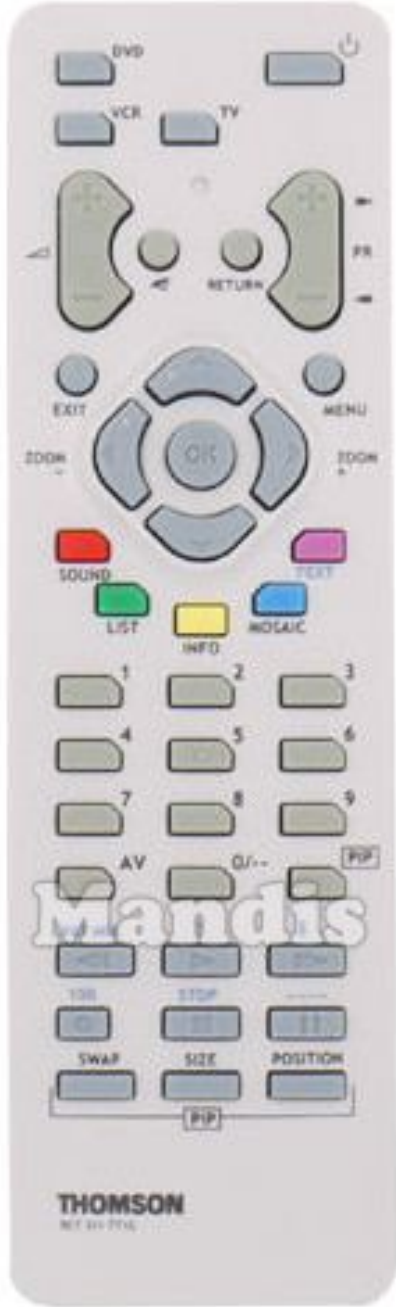

















Original	Replacement	Original	Replacement
 9	 9		
 0/-/-	 0		
 AV	 RDS AV INPUT AV / Input / RDS		
 PIP	 ZOOM Zoom / Size		
 <</Pat-Mix	 TUNE- << / Tune-		
 Play/?	 SLOW Play / Slow		
 >>	 TUNE+ >> / Tune+		
 Rec/100	 REC MODE Rec / Rec Mode		
 Stop	 HOLD Stop / Hold		
 Pause/----	 STEP-FREEZE Pause / Step / Freeze		
 Swap PIP	 OPT-TOOLS Setup / OPT /		
 Size PIP	 FORMAT PICTURE Picture / Format		
 Position PIP	 PROGRAM TV/RADIO TV/Radio /		






Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 PR-	 CH- / Page-
 <<	 << / Preset-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 Green	 Green / APP / Repeat
 List	 Shift + Smart / List
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Mosaic	 Smart / List
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8




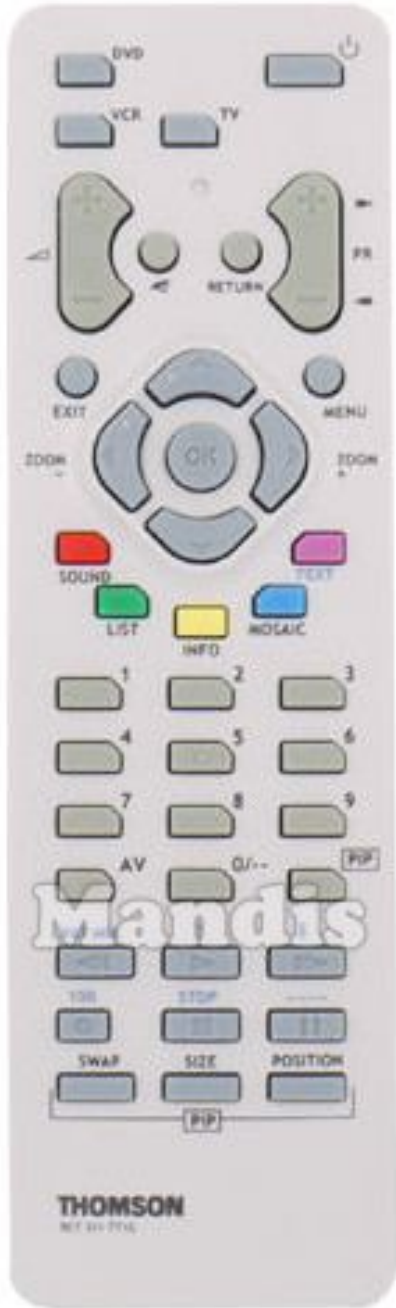





 


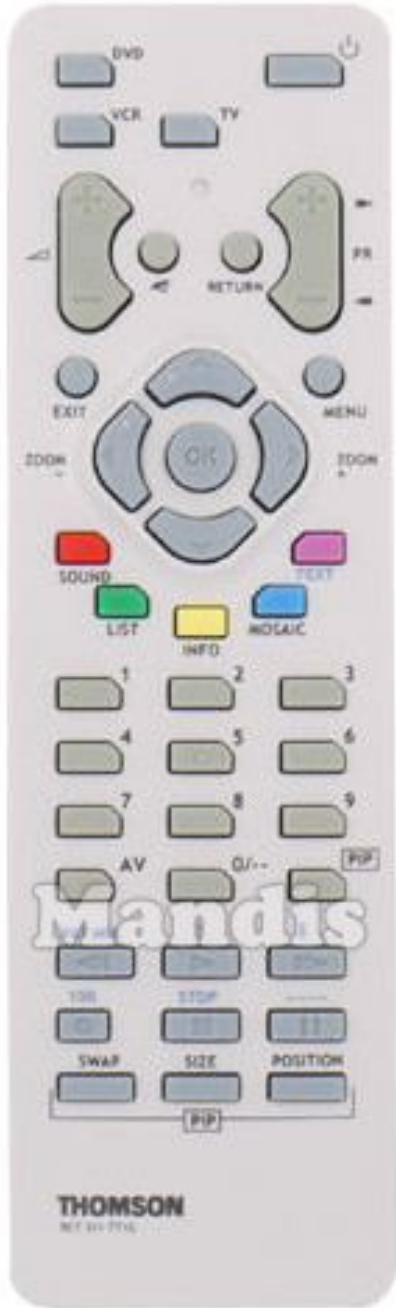





















Original		Replacement	
	9		9
	0/-/-		0
	AV		AV / Input / RDS
	PIP		Zoom / Size
	<</Pat-Mix		<< / Tune-
	Play/?		Play / Slow
	>>		>> / Tune+
	Rec/100		Rec / Rec Mode
	Stop		Stop / Hold
	Pause/----		Pause / Step / Freeze
	Swap PIP		Setup / OPT /
	Size PIP		Picture / Format
	Position PIP		TV/Radio /

Original		Replacement	






Original	Replacement
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 <<	 << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Sound	 Sound / Title
 List	 Shift + Smart / List
 Green	 Green / APP / Repeat
 Info	 Info / Angle
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Mosaic	 Smart / List
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8



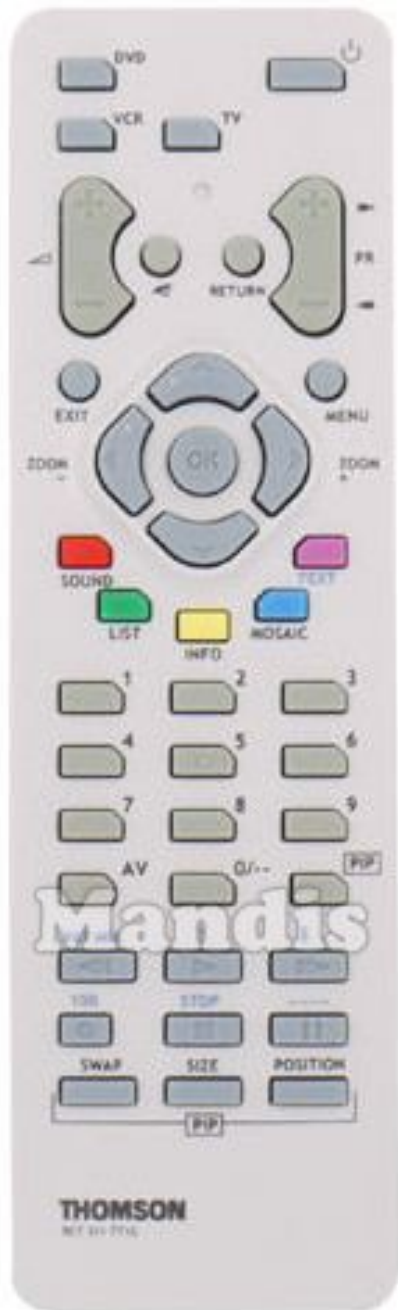

	Original	Replacement		Replacement
	9		9	
	0/-/-		0	
	AV		AV / Input / RDS	
	PIP		Zoom / Size	
	<</Pat-Mix		<< / Tune-	
	Play/?		Play / Slow	
	>>		>> / Tune+	
	Rec/100		Rec / Rec Mode	
	Stop		Stop / Hold	
	Pause/---		Pause / Step / Freeze	
	Size PIP		Picture / Format	
	Position PIP		TV/Radio /	

	Original	Replacement		Replacement

