


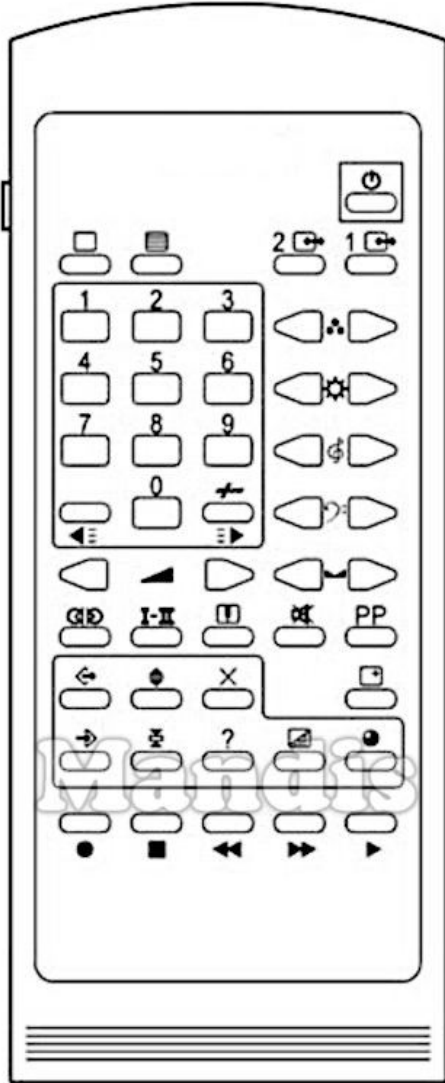

Original	Replacement	Original	Replacement
	Power		Power
	TV		9
	Text		9
	Source 2		<< / Tune-
	Source 1		>> / Tune+
	1		Shift + CH- /
	2		0
	3		Shift + CH+ /
	Contrast-		Guide / EPG / -/-
	Contrast+		Left
	4		Right
	5		Vol-
	6		Vol+
	Brightness-		CH- / Page-
	Brightness+		CH+ / Page+
	7		Sound / Title
	8		Audio / Lang I/II
			Zoom / Size
			Mute / Dimmer





	Original	Replacement	Original	Replacement
	PP	Back / Return		
	Exit	Exit / Cancel / Clear		
	Size	+  Shift + Zoom /		
	Cancel	+  Shift + Exit / Cancel / Clear		
	[ + ]	Info / Angle		
	Enter	OK		
	Hold	Stop / Hold		
	Reveal	TV/Radio /		
	Mix	+  Shift + Text /		
	Subcode	Subtitle / EQ		

