









 

 

 
 
 
 

 
 
 
 
 
 


 
 



 
 



 
 
 
 


 
 
 
 
 
 
 
 



 







 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down




 


 
 

 
 

 
 




 
 
 


 

 
 

 





 



	Original	Replacement		Original	Replacement
		QV			Options
		FAV			Pre Ch
		Source			AV
		Sleep			Sleep
		Picture			Shift + Format
		Sound			Shift + Dual
		Display			Info
		I/II / Top			Dual
		FAV - / REV			<<
		FAV + / FWD			>>
		USR/CR / Text			Media
		USR/CR / Text			Text
		Play/Pause / Index			Play
		Play/Pause / Index			Shift + Info
		Play/Pause / Index			Pause
		Stop / Cancel			Stop
		Stop / Cancel			Shift + Exit

	Original	Replacement
		Size
		Format
		Prog / Mix
		Smart
		Prog / Mix
		Shift + Sleep
		Return / SUBPG
		Back
		Repeat / Reveal
		Shift + Back
		Search / Hold
		TV/R





Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

