



Original		Replacement		Original		Replacement	
	Input		AV / Input / RDS		OK		OK
	Power		Power		Right		Right
	Xumo		Setup / OPT /		Down		Down
	Netflix		Red / Netflix / Search		Back		Back / Return
	Amazon		Blue / Prime Video / Random		Guide		Guide / EPG / -/-
	<<		<< / Tune-		Vol+		Vol+
	Pause		Pause / Step / Freeze		V		Display / Media
	Play		Play / Slow		CH+		CH+ / Page+
	>>		>> / Tune+		Vol-		Vol-
	CC		Subtitle / EQ		CH-		CH- / Page-
	Rec		Rec / Rec Mode		Mute		Mute / Dimmer
	Stop		Stop / Hold		[]		Zoom / Size
	Menu		Menu / Home		PIC		Picture / Format
	Exit		Exit / Cancel / Clear		Recall		Fav / Marker / PC
	Info		Info / Angle		1		1
	Up		Up		2		2
	Left		Left		3		3





	Original	Replacement		Original	Replacement
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Enter		Smart / List		
	0		0		
	--		Text / Goto		

